

EduLink Receiver

Sticker with default channel identification

Battery compartment cover

Size 312 batteries

On/Off Switch –Volume control

Turn clockwise:

Switch on/increase volume

Turn counter-clockwise:

Switch off/decrease volume

Earpiece

Retention Lock

Conformed to fit the individual ear

Battery compartment cover

Retention lock

