Campus S Transmitter

On/Off-Long press (2 seconds)
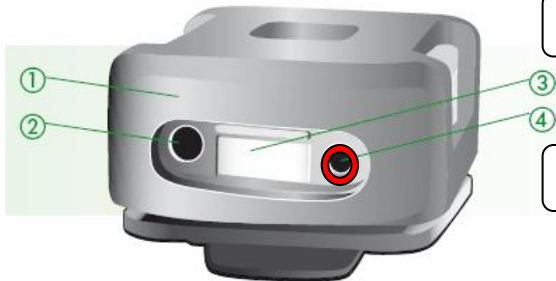**Mute-**Short press

Synchronization

- Go to student
- Hold Campus S close to receiver
- Press 🛜 for 1 second
- Student will hear 3 beeps

Channel Selection

Rubber Coat

Audio Input Socket

Personalization label

Charging Socket (red ring)

To lock keypad:
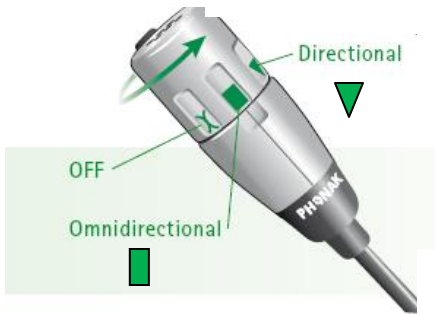Press both keys at the same time for 1 second

LCD Display

Key pad lock

Battery Status

FM Channel

Lapel Microphone Settings

Directional

OFF

Omnidirectional

Worn 8 inches from speaker's mouth